


Flexi Wave | Wall (Vertical and Horizontal)

Page 1 of 1 |

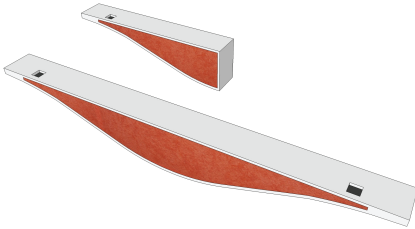

Required Apparatus:

- Flexi Wave (1 and 1/2 Panel)
- 2 x Metallic pieces
- 4 x Screws
- 1 x Screwdriver

Installation Instructions:

Wall surfaces should be examined prior to installation, ensuring they are clean, smooth, and dry.


If you have unpainted gypsum board surfaces, these should be primed with a drywall primer (or another material manufactured especially for the purpose), to equalize the absorption between the gypsum board face paper, joint compound, and skin coating materials. You should then apply the paint, and allow air circulation in order to dry the paint within the time frame specified by the paint manufacturer. Please ensure the paint is dry before installing the acoustic panel.

Make sure the room has all the conditions necessary to receive the acoustic panels.

After you apply the glue on the back of each acoustic panel, please ensure you hold the acoustic panel on the wall the required time (mentioned below), and ensure it stays fixed in place.


STEP 1

Fix with screws the metallic pieces on the wall.
They should be spaced vertically 960 mm from each other.

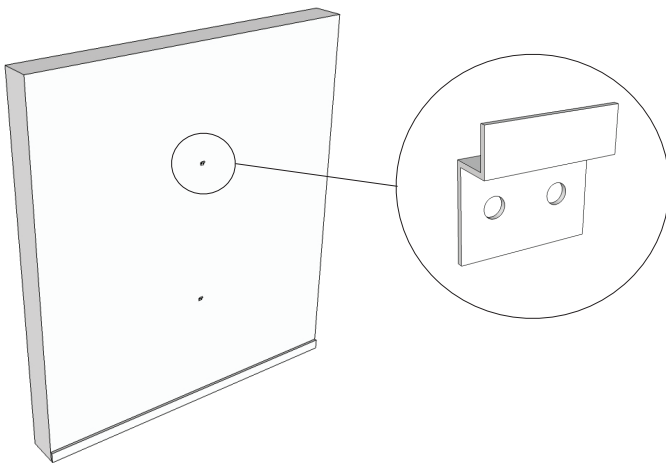

STEP 2

Place the Flexi Wave matching the holes in the panel with the metallic pieces in the wall. Make some pressure against the panel and down in order to assure the complete fixation of the product.

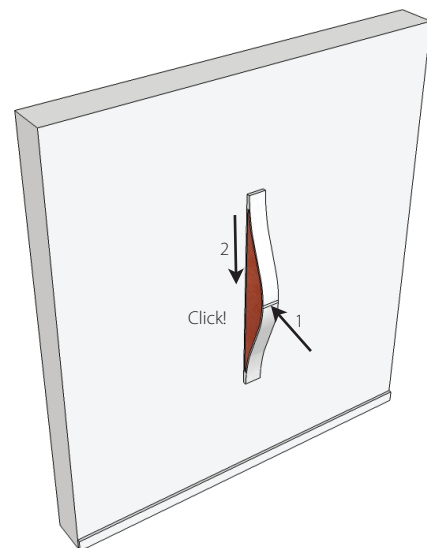

NOTES:

- The horizontal installation follows exactly the same steps. The metallic pieces should be placed in the same direction but spaced 960 mm in the horizontal.
- The 1/2 Flexi Wave only uses one metallic piece. In the vertical and horizontal installation should be used glue in the other end to assure a more secure fixation.