


Wavewood | T-Frame

Page 1 of 1 |

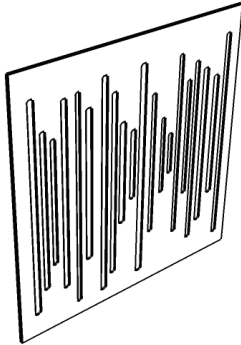

Required Apparatus:



- Wavewood (panel)
- (Standard metallic T-frame structure)

Installation Instructions:

Please ensure the ceiling profiles are correctly assembled, and ready to receive the acoustic panels. Make sure the room has all the conditions necessary to receive the acoustic panels. Our Acoustic panels are 595mm x 595mm, fitting perfectly in most common false ceilings.

STEP 1

The panels should be placed in the spaces between the profiles. To mount the panels, slide them at an angle and rest them on the T shaped structure, as shown in the detailed view above.

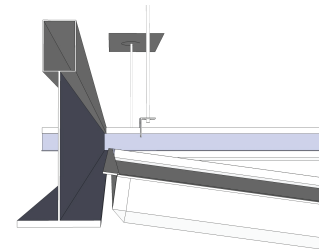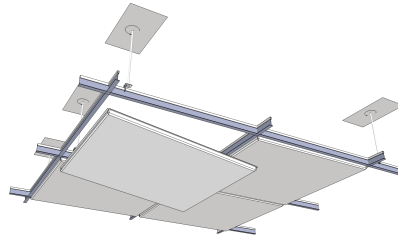

STEP 2

Proceed with placing the remaining panels.

